



Asus ROG G751JL-BB17T29 Monitor Replacement

If your monitor is damaged, defective, or inoperable then you may need to replace it.

Written By: Kristofer Cesaroni



INTRODUCTION

This guide will attempt to show the user how to properly remove and replace the monitor without damaging it or any intermediary components.



TOOLS:


- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — CD-ROM Player





- Lift rubber cover on the back of the laptop.
- Remove 5.2 mm screw with a Phillips screwdriver.

Step 2

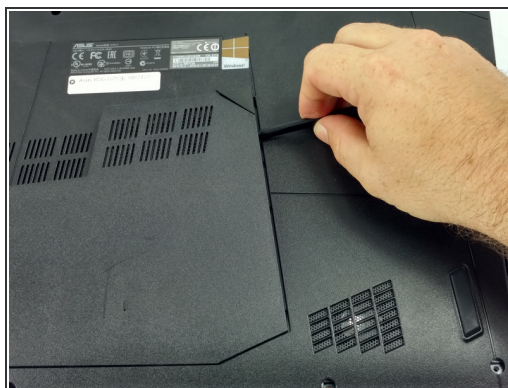

- Using the nylon spudger, remove the back center panel.

Step 3

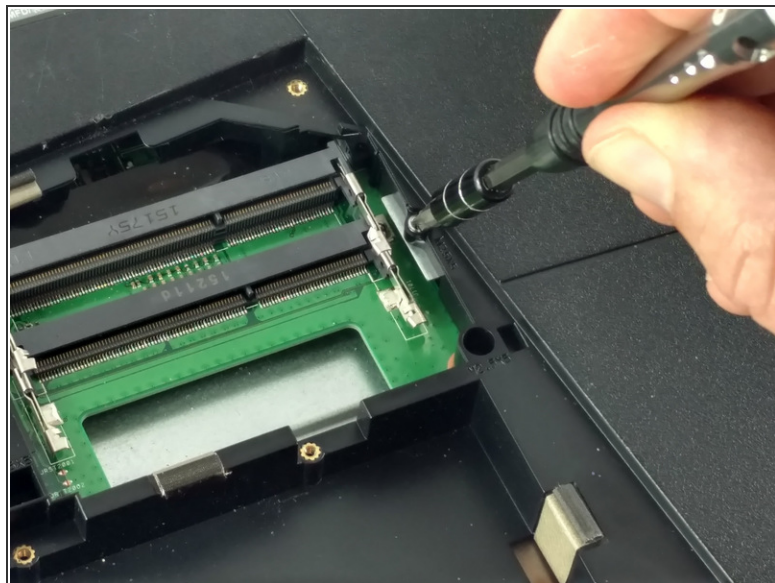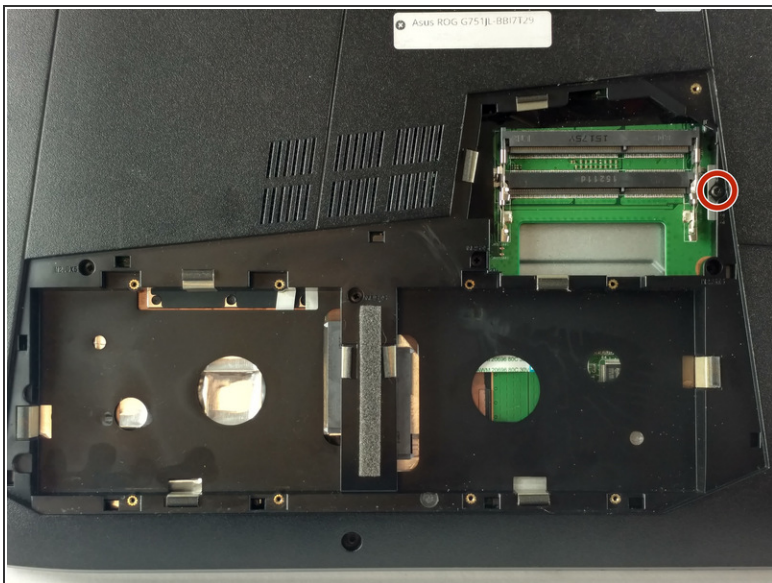


- Remove the 5 mm Phillips screw that is located underneath the back panel.

Step 4




- Pull out the optical drive located on the side of the laptop.

Step 5 — Keyboard

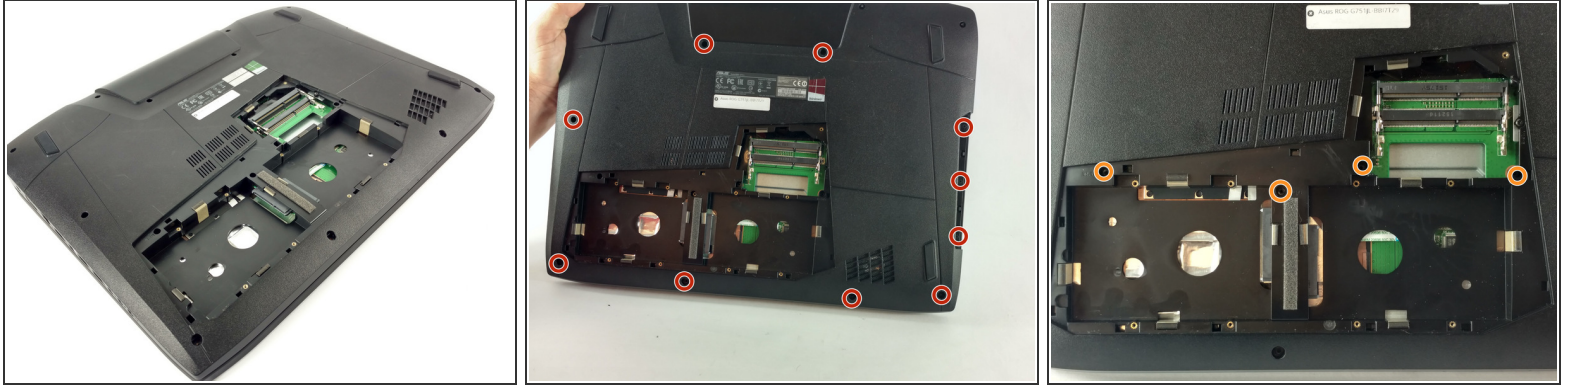

- Remove the ten 5.2 mm screws holding the main panel in place, highlighted in the photo, with a Phillips screwdriver.
- Remove the four 5.2 mm screws underneath the center panel, highlighted in the photo, with a Phillips screwdriver.

Step 6

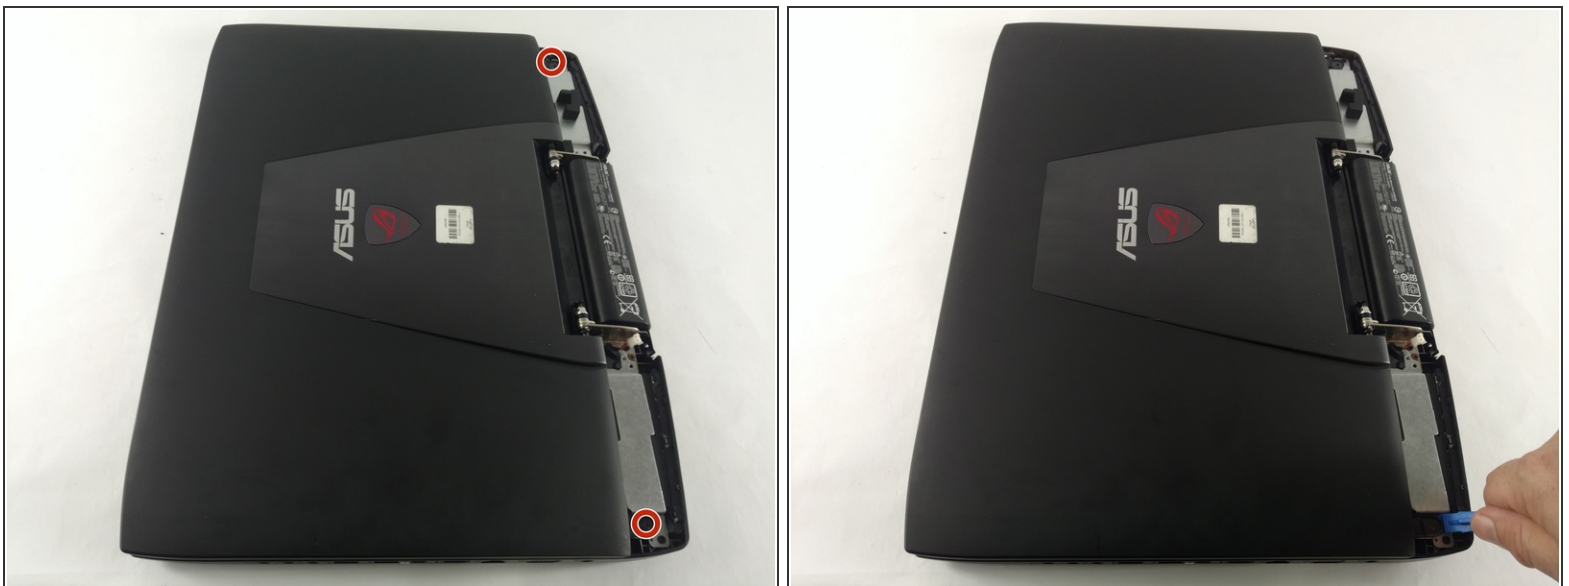



- Remove the two 6.8 mm screws underneath to back panel, highlighted in the photo, with a Phillips screwdriver.

Step 7



- Use the plastic opening tool to pry the keyboard from the base of the laptop.


Step 8

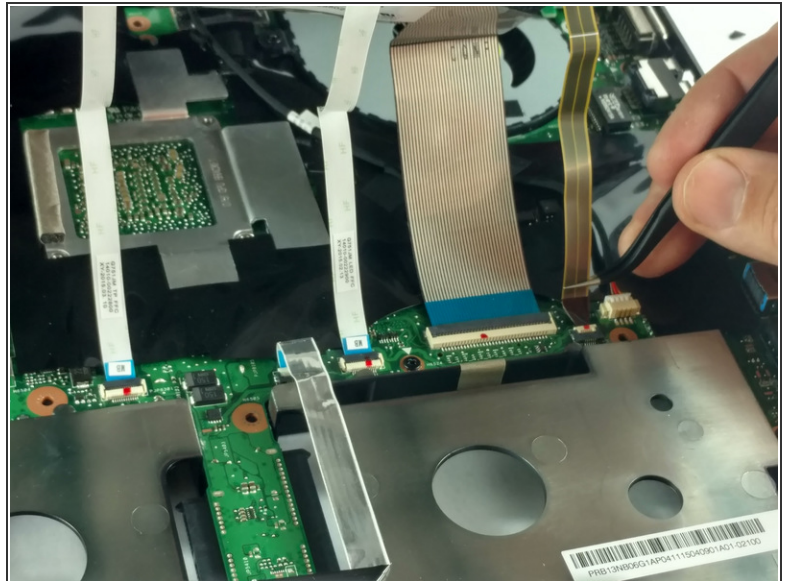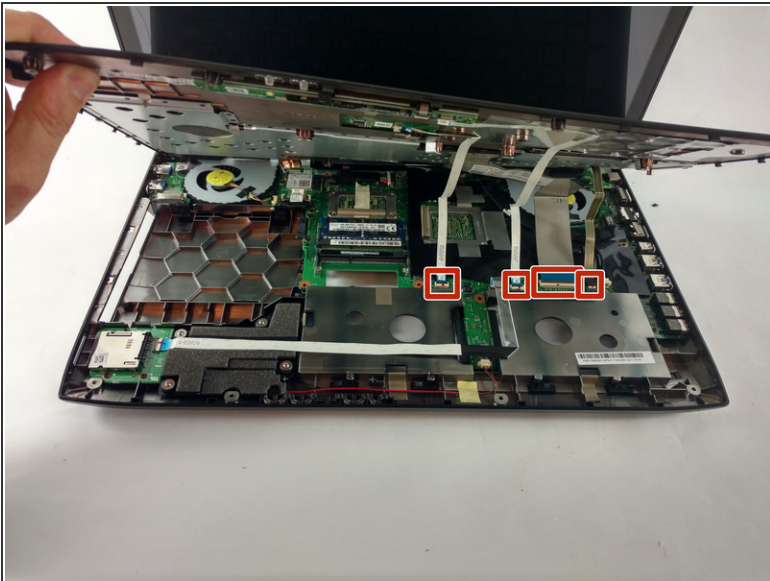

⚠ Lift the keyboard carefully, otherwise the ribbon connectors may tear or break

- Using a pair of tweezers undo each of the four ribbon connectors indicated in photo.
- The keyboard is now fully disconnected and you are now free to lift the keyboard away from the computer.

Step 9 — Top Rear Panel

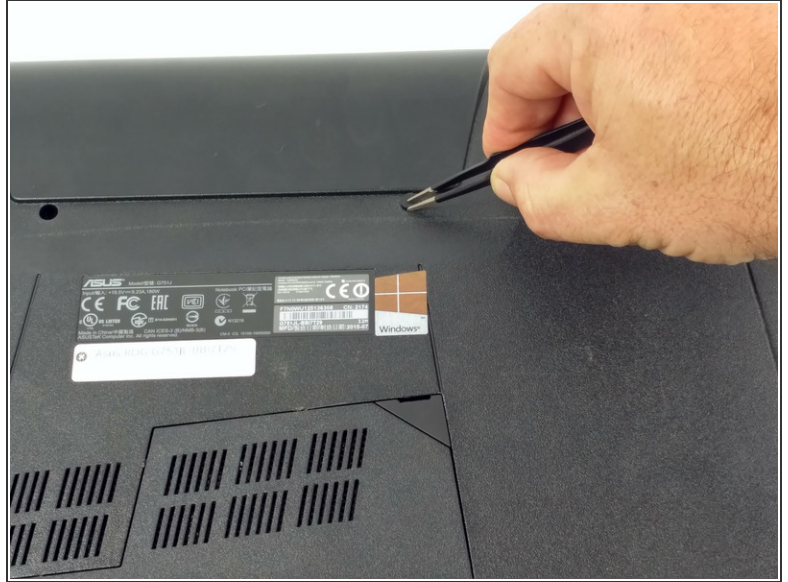

- Begin by removing the top four rubber stoppers that are highlighted in the photo using a pair of tweezers.

Step 10



- Remove the top four 8.5mm screws that are highlighted in the photo using a Phillips screwdriver.

Step 11




- The speakers are located on the top facing side of the computer, next to where the screen connects to the base.
 - Using a nylon spudger, carefully pry the top back panel off to reveal the speakers.
- ⚠ While removing the top back panel, be careful not to break the four pin connector located underneath.

Step 12




- Disconnect the four-pin connector and remove the top back panel from the computer.

Step 13 — Monitor

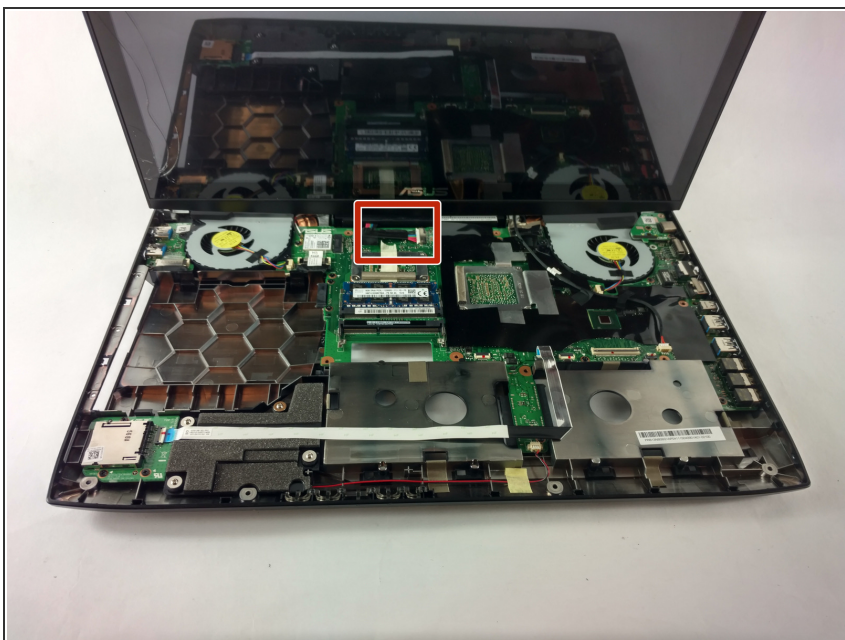


- Carefully disconnect the pin connector indicated in the photo.

Step 14

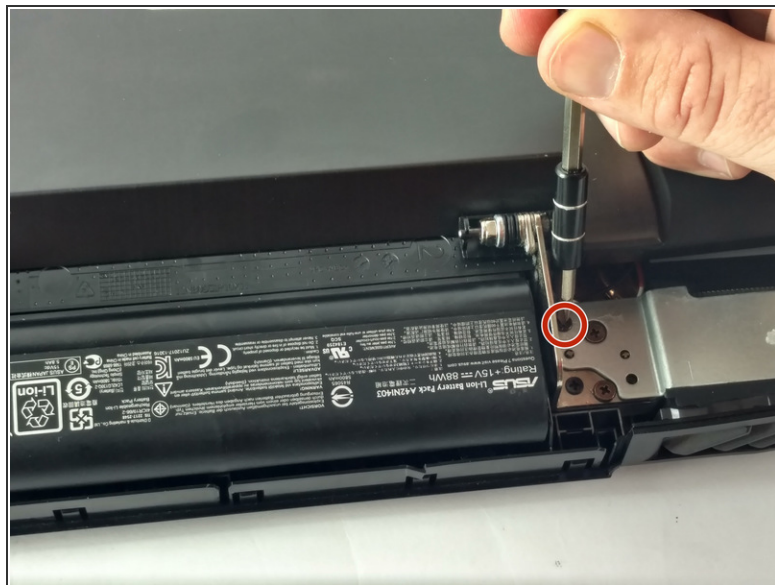

- Remove the four 6.8 mm screws holding the monitor in place, using a Phillips screwdriver.

Step 15

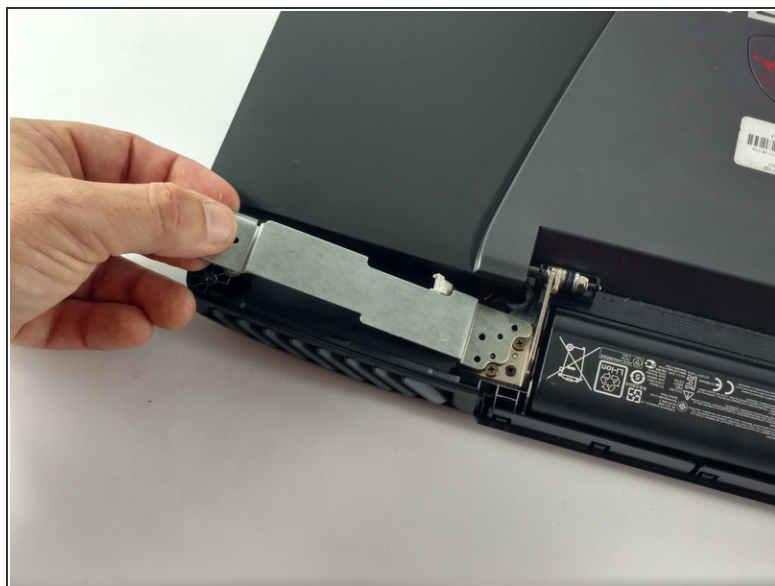

- Lift away the metal housings from the laptop to uncover two additional screws on each side of the laptop.

Step 16



- Remove the final four 6.8 mm remaining screws using a Phillips screwdriver.
- The monitor is now free and can be lifted away from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 06:36:10 PM.